

AIR-CONDITIONER REMOTE CONTROLLER

INSTRUCTIONS



- Read this “instructions” carefully so that you can use the air-conditioner safely and correctly.
- Take good care of the “instructions” so that it can be referred to at any time.

CONTENTS

Names and functions of the button-----	1
Application Method-----	2
Fix batteries -----	2
Cooling operation mode -----	3
Heating operation mode -----	3
Drying operation mode -----	3
Timer setting -----	4
Set the “Timer On” -----	4
Set the “Timer OFF” -----	4
Attention-----	4

Names and functions of the button

★ Timer setting

Set the “**TIMER ON**” (effective only when the air-conditioner is shut off)

1. Press **TIMER** button to select timer on.
2. Press **UP** and **DOWN** button to set the wait time. Each pressing prolongs or curtails one wait hour. The indicators go out one by one as time goes hour by hour. The air-conditioner will start automatically until all the timer indicators put out .
3. Press **TIMER** button again to cancel the function.


Set the “**TIMER OFF**” (effective only when the air-conditioner is in operation)

1. Press **TIMER** button to select timer off .
2. Press **Up** and **DOWN** button to set the wait time. Each pressing prolongs or curtails one wait hour. The indicators go out one by one as time goes hour by hour. The air conditioner will stop automatically until all the timer indicators put out.
3. Press **TIMER** button again to cancel the function.

Note: The timer can be set ranger from 1 to 12 hours.

Attention

- ★ Aim the remote controller towards the receiver on the air-conditioner .
- ★ The remote controller should be within 8 meters away from the receiver.
- ★ No obstacles between the remote controller and receiver.
- ★ Don't drop or throw the remote controller.
- ★ Don't put the remote controller under the forceful sunray or heating facilities and other heating sources.
- ★ Use two 7# batteries, don't use the electric batteries.
- ★ Take the batteries out of remote controller before stop its using for long.

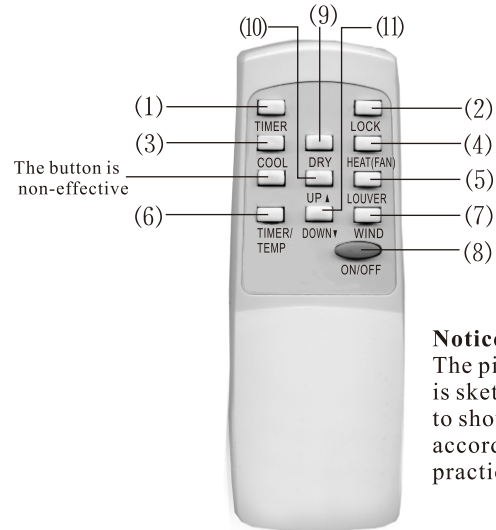

Notice:

The picture in manual is sketch map and just to show the use ,please according to the practicality.

The **cooling only units** don't have the function of heating or electric heating. When the remote controller turns to such function buttons, the units will not result such effect.

*Please don't turn the remote controller to such buttons.

(1) **Timer button**

Press **TIMER** button to initiate the auto-on or auto-off in a sequence.

(2) **Lock button**

Press **LOCK** button at non-lock state, the remote controller enters the state of lock, then all the buttons on the operation panel and the remote controller become invalid except for the LOCK button. Press it again, the locking state is cancelled and buttons become valid again.(This function can prevent outsiders or children from fiddling with the air-conditioner)

(3) **Cooling mode button**

Press **COOL** button, the operation mode is shifted into cooling.

(4) **Heating mode button(only for heat pump type)**

Press the **HEAT** button, the mode of operation is shifted into heating.

Fan mode button(only for cold pump type)

Press the button, the mode of operation is shifted into circulation.

(5) **Louver button**

Press **LOUVER** button, the vertical wind direction vanes can rotate automatically, when you have the desired horizontal wind direction, press it again, the vertical wind direction vanes will be stopped at the situation of your choice.

(6) **Timer/Temp button**

Press **TIMER/TEMP** button to show the temperature. Press it again to show the automatic **ON** or **OFF** time.

(7) **Wind button**

Press **WIND** button, you can select fan speed from “High” to “Low” .

(8) **On/Off button**

Press **ON/OFF** button to start the air-conditioner. Press it again, the air-conditioner ceases operation.

(9) **Dry button**

Press **DRY** button, the operation mode is shifted into dehumidifying .

(10) **Up button**

When the air-conditioner is in timing state, there will be 1 hour increment after each pressing of the “▲” button . When in other state, press this button once, the setting temperature will increase 1℃ .

(11) **Down button**

When the air-conditioner is in timing state, there will be 1 hour decrement after each pressing of the “▼” button . When in other state, press this button once, the setting temperature will decrease 1℃ .

Application method

★ **Fix batteries**



1. Slide open the cover according the direction indicated by arrowhead.

2. Put into two brand new batteries (7#), position the batteries to right electric poles (+&-).

3. Put back the cover.

Make sure to connect the wire to independent power source socket before you use the remote controller.

Caution: Dealing with the worn battery shall comply with the local codes for battery disposal.

★ **Cooling operation mode**

1. Press **COOL** button, the cooling indicator on the control panel is lighted.
2. Initial setting temperature is 27℃, and the setting fan speed is “High” .
3. The range of setting temperature is 16℃ ~32℃, the temperature can be adjusted via pressing **UP** or **DOWN** button.
4. Press **WIND** button to choose high fan speed or low.
5. Press **ON/OFF** button, the air conditioner start operation. press it again ,operation stops.

★ **Heating operation mode(only for heat pump type)**

1. Press **HEAT** button, the heating indicator on the control panel is lighted.
2. Initial setting temperature is 18℃, and the setting wind speed is “High” .
3. The range of setting temperature is 16℃ ~32℃, the temperature can be adjusted via pressing **Up** or **DOWN** button.
4. Press **WIND** button to choose high fan speed and low.
5. Press **ON/OFF** button, the air-conditioner start to operate heating ; press it again ,heating operation stops.

★ **Drying operation mode**

1. Press **DRY** button ,the dehumidifying indicator on the control panel is lighted.
2. The indoor fan fixes at low speed in dry operation mode.
3. Press **LOUVER** button to adjust desired airflow direction.
4. Press **ON/OFF** button, the air-conditioner start to dehumidify ; press it again ,dehumidification stops.

Note :(1) The setting temperature doesn't show in dehumidifying operation.

(2) You can't select fan speed, set temperature in this mode.