


AIR-CONDITIONER REMOTE CONTROLLER INSTRUCTIONS

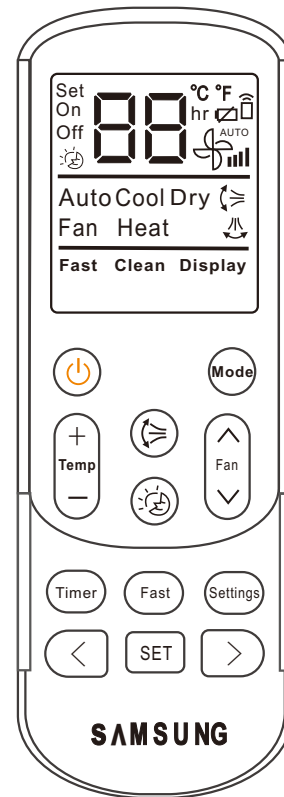

- Read this “instructions” carefully so that you can use the air-conditioner safely and correctly.
- Take good care of the “instructions” so that it can be referred to at any time.


Attention

1. Aim the remote controller towards the receiver on the air-conditioner.
2. The remote controller should be within 8 meters away from the receiver.
3. No obstacles between the remote controller and receiver.
4. Do not drop or throw the remote controller.
5. Do not put the remote controller under the forceful sunrays or heating facilities and other heating sources.
6. Use two 7# batteries, do not use the electric batteries.
7. Take the batteries out of remote controller before stop its using for long.
8. When the noise of transmitting signal can't be heard indoor unit or the transmission symbol on the display screen doesn't flare, batteries need be replaced.
9. If reset phenomenon occurs on pressing the button of the remote controller, the electric quantity is deficient and new batteries need to be substituted.
10. The waste battery should be disposed properly.

CONTENTS

Buttons description-----	1
Usage-----	5
Fix batteries -----	5
Automatic operation mode-----	5
Cooling/Heating operation mode-----	5
Fan operation mode-----	6
Drying operation mode-----	6
Night Luminous Function of Remote Controller ----	6
Attention -----	7

Buttons description

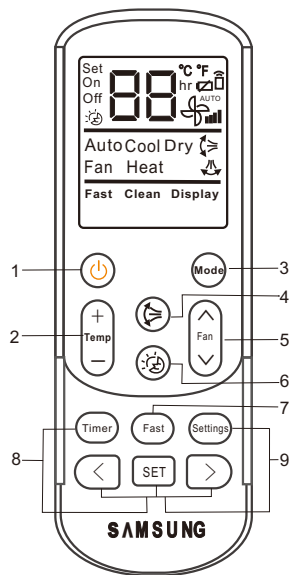

Note:
All the figures above are the displays after being initially electrified or re-electrified after power off. In actual operations, the remote controller screen displays related items only.

★ Fan operation mode

1. Press the button, the operation indicator is on
2. Press the Mode button, select the Cooling or Heating operation mode.
3. Press the Fan button, you can select fan speed. You can select fan speed from LOW, MID, HIGH.
4. Press the button again, the air-conditioner stops.

Remark: In the circulation operation mode, to set the temperature is noneffective.

★ Drying operation mode

1. Press the button, the operation indicator is on
2. Press the Mode button, select the Dry operation mode.
3. Press the “” or “” button, set the temperature, temperature can be set at 1°C difference range from 16-32°C.
4. Press the Fan button, you can select fan speed. You can select fan speed from AUTO, LOW, MID, HIGH.
5. Press the button again, the air-conditioner stops.

★ Night Luminous Function of Remote Controller (Only the remote controller with this function can be used)

For your convenient use of the remote controller in the darkness without any lighting, this remote controller has blue background light and luminous pushbuttons. No matter what you press on any of the pushbutton, the background light will immediately release soft light so that you are easy to operate the remote controller. If you do not operate the controller within 10 seconds, the background light will automatically disappear.

Note:
This manual introduces function for all of the remote control, maybe you press one button without any reaction, well, the air-conditioner you bought hasn't this function.

 
The cooling only units don't have the function of heating or electric heating. When the remote controller turns to such function buttons, the units will not result such effect.
 *Please don't turn the remote controller to such buttons.

Note: The picture is general remote controller, contains almost all of the function buttons. They may be slightly different from material object(depend on model).

1. “” button
 You can start or stop the air-conditioner by pressing this button.
2. “” button
 Press the “” or “” button, you can set the temperature range from 16°C to 32°C, Display will change when you touch the button.

Note: This button is non-effective in Fan operation mode.


3. “” button
 Press this button, the running mode will change as below:



Note: cooling only unit has no heating function.



Usage

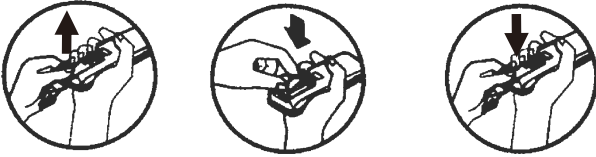★ Fix batteries







1. Open the cover according the direction indicated by arrowhead.
2. Put into two brand new batteries (7#), position the batteries to right electric poles (+&-).
3. Put back the cover.

★ Automatic operation mode

1. Press the  button, the operation indicator is on
2. Press the Mode button, select the automatic operation mode.
3. Press the Fan button, you can select fan speed.
4. You can select fan speed from AUTO, LOW, MID, HIGH.
5. Press the  button again, the air-conditioner stops.

★ Cooling/Heating operation mode (cold wind type has no heating function)

1. Press the  button, the operation indicator is on
2. Press the Mode button, select the Cooling or Heating operation mode.
3. Press the “” or “” button, set the temperature, temperature can be set at 1°C difference range from 16-32°C.
4. Press the Fan button, you can select fan speed.
You can select fan speed from AUTO,LOW, MID, HIGH.
5. Press the  button again, the air-conditioner stops.



4. “” button

- a. Press this button to open up/down swing function, press it again, fix louver position.
- b. Up/down setting is only valid in this mode, it will not affect louver position in other modes.
- c. Up/down swing has memory function, it can keep primary setting when turn off then turn on or switch from other modes to primary mode.

5. “” button

You can select fan speed as the following:

Auto → Low → Mid → High

Press  and  button can adjust fan speed within the range of Auto/Low/Mid/High

Note: there is no auto speed in FAN mode.

Fan speed regulation only valid in the current mode(speed in other modes will not change), and the speed will be memorized automatically to the corresponding mode. When you switch back to the mode, the fan speed will be same as last time you set.

For example, first in Auto mode we set the speed at Auto/Low, after the unit operates in other modes(Cool, Dry, Heat) with different fan speeds, when we switch back to Auto mode, the speed will be Auto/Low as the last time we set.

6. “” button

Press this button to enter SLEEP mode, which the unit will exit after 10 hours of continuous operation and restore to the previous status.

Note:The SLEEP function cannot be activated in FAN mode.

7. “Fast” button

Press this button only in Cool or Heat mode to set Fast on or off (the characters of fast will appear or disappear).

When Fast is on, the air speed is Fast.

When Fast is off, the air speed will restore to previous status.

8. “Timer” “<” “SET” “>” button

① **Setting the “ON” timer time:**

- a. When remote controller is at off state, press “Timer” button, the LCD displays “hr” and the timer time, the range of setting time is 0.0h to 24h.
- b. You can press the “<” or “>” button to adjust the timer time and enable your required timer. For timer function setting, in the range of 0-3h Min unit of adjustment is 0.5h, in the range of 3-24h Min unit of adjustment is 1h.
- c. Press “SET” button, to set the timer on function.
- d. You can set another function to insure the suitable state after air conditioner turn on (including mode, temp). The LCD will displays all your setting for 3s and displays “on” eventually, when the timer reach to the set time, the air conditioner will be working according to your set automatically.
- e. This function can be canceled by repeating the steps above, and set the time 0.0hr, then press “SET” (Display will be dark on the screen).

② **Setting the “OFF” timer time:**

- a. When remote controller is at on state, press “Timer” button, the LCD displays “hr” and the timer time, the range of setting time is 0.0h to 24h.
- b. You can press the “<” or “>” button to adjust the timer time and enable your required timer. For timer function setting, in the range of 0-3h Min unit of adjustment is 0.5h, in the range of 3-24h Min unit of adjustment is 1h.
- c. Press “SET” button, to set the timer off function.
- d. This function can be canceled by repeating the steps above, and set the time 0.0hr, then press “SET” (Display will be dark on the screen)

9. “Settings” “<” “SET” “>” button

① **“Display” function**

- a. When remote controller is at on state, press “Settings” button, then “Display” on the screen will flash 5 sec. press “SET” button in this 5 sec, then display will be lighting on the screen.
- b. Press “<” or “>” button in 5 sec, display will continue to flash 5 sec, choose the display and press “SET” to confirm, then “Display” will be lighting on the screen.
- c. If no button “<” “SET” “>” pressed in 5 sec, then the setting will be failure.

d. This function can be canceled by repeating the steps above (“Display” will be dark on the screen).

② **“Clean” function**

- a. When remote controller is at off state, press “Settings” button, then “Clean” on the screen will flash 5 sec. press “SET” button in this 5 sec, then display will be lighting on the screen.
- b. Press “<” or “>” button in 5 sec, “Clean” will continue to flash 5 sec, choose the clean and press “SET” to confirm, then “Clean” will be lighting on the screen.
- c. If no button “<” “SET” “>” pressed in 5 sec, then the setting will be failure.
- d. This function can be canceled by repeating the steps above (“Clean” will be dark on the screen).
- e. The clean function will be stop working after 30 minutes running working without any operation.
- f. The purpose of this function is to clean dust on evaporator and dry the inside water of evaporator and to prevent the evaporator going moldy due to water deposition and boasting strange smell.